

Vektek, Inc. 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	Instruction Sheet	IS-	5604		
		REV:	A I.A.W. ECN 1352		
		BY/DATE:	M Say	08/01/05	
		APPR/DATE:	R. Hausler	10-4-05	
Title Operating Instructions: Two and Four Sided Top Plate Assemblies					

Read all instructions before operating

1. Shut off the power supply and release any pressure on the output line.
2. Close all valves on the top plate.
3. Connect the power supply to the top plate, through the quick disconnect coupling.
4. Open the valve on the fixture where the part will be changed out. Change out the part and close the valve.
5. Pressurize the fixture by holding the pendant rocker switch in the clamp position. After the system is pressurized, release the switch.
6. Rotate the tombstone to the next fixture to be loaded.
7. Repeat steps four, five and six until all fixtures are reloaded.
8. Disconnect the power supply from the tombstone.

NOTE:

Tombstone fixtures may be loaded or unloaded independently, without loss of pressure to adjacent fixtures.