



VEKTEK, INC.  
1334 E. SIXTH AVE.  
P.O. BOX 625  
EMPORIA, KS. 66801  
U.S.A.

## INSTALLATION INSTRUCTIONS

IS-7110  
REV. A ECN 645  
PAGE 1 OF 1  
DRAWN/DATE RATZLAFF  
07/18/02

115VAC 2/4 VALVES ONLY

FAILURE TO FOLLOW INSTRUCTIONS WILL CAUSE VALVE FAILURE,  
AND VOID WARRANTY.

### REPLACEMENT OF 115VAC 2/4 VALVE WITH 115VAC 3/4 VALVE

1. READ AND UNDERSTAND THIS DOCUMENT IN ITS ENTIRETY.
2. NO INTERNAL WIRING REQUIRED.
3. DISCONNECT POWER TO PUMP.
4. DISCONNECT VALVE CONTROL CABLE FROM VALVE.
5. REMOVE VALVE FROM PUMP.
6. INSTALL NEW VALVE ON PUMP USING BOLTS SUPPLIED.
7. CONNECT VALVE CONTROL CABLE TO WIRING HARNESS SUPPLIED WITH NEW VALVE.
8. CONNECT POWER TO PUMP.
9. CHECK FOR PROPER VALVE FUNCTION.
10. IF NORMAL FUNCTION DOES NOT RETURN, CONTACT FACTORY AT 1-800-992-0236