



VEKTEK, INC.  
1334 E. SIXTH AVE.  
P.O. BOX 625  
EMPORIA, KS. 66801  
U.S.A.

## INSTALLATION INSTRUCTIONS

IS-7111  
REV. A ECN 888  
PAGE 1 OF 1  
DRAWN/DATE RATZLAFF  
04/29/03

P/N'S 71-1235-21, 71-1235-22,  
71-1235-40, 71-1235-41

FAILURE TO FOLLOW INSTRUCTIONS WILL CAUSE VALVE FAILURE,  
AND VOID WARRANTY.

1. READ AND UNDERSTAND THIS DOCUMENT IN ITS ENTIRETY.
2. VERIFY THAT COILS TO BE INSTALLED ON VALVE ARE OF DESIRED VOLTAGE FOR VALVE AND/OR APPLICATION.
3. DISCONNECT ALL POWER TO VALVE.
4. NOTE ORIENTATION OF COILS TO VALVE BODY.
5. REMOVE ORIGINAL COIL AND DIN PLUG (PICTURED BELOW) FROM VALVE BY LOOSENING NUT ON END OF VALVE.
6. INSTALL NEW COIL AND DIN PLUG IN THE SAME ORIENTATION AS THE ORIGINAL COIL, REINSTALL NUT.
7. REPEAT STEPS 2 THRU 5 FOR SECOND COIL.
8. VERIFY VOLTAGE STAMPED ON BOTH COILS INSTALLED ON VALVE ARE THE DESIRED VOLTAGE AND THE SAME.
9. CONNECT POWER TO VALVE.
10. TEST VALVE FOR PROPER FUNCTION.

