


Center Position  
All lines blocked  
A or B pressure held

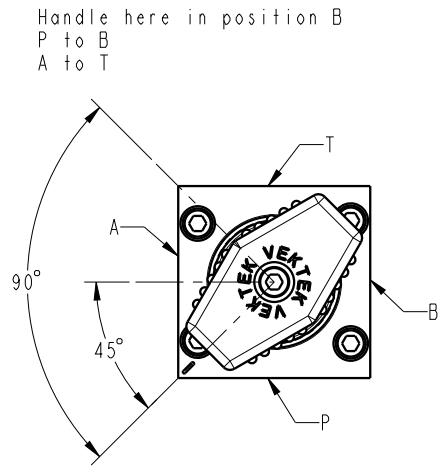

Handle here in position A  
P to A  
B to T

To Reposition Handle:

1. Remove center screw
2. Take off and reposition handle
3. Apply low strength loctite to center screw
4. Torque center screw to 20 in-lbs

Switch valve from position A or B to center position to hold pressure in A or B line. Center position will hold pressure in case of pressure loss from pump.

### INSTALLATION INSTRUCTIONS



VEKTEK, INC.  
1334 E. SIXTH AVE. P.O. BOX 625  
EMPORIA, KS. 66801 U.S.A.

A	3892	RELEASE	ALS	08/08/19
REV	IN ACCORDANCE WITH ECN	EFFECTIVE DATE	REVISED BY	DATE
DRW BY:	ALS	<b>DRAWING STATUS: Released</b> PRODUCTION APPROVED FOR RELEASED STATUS ONLY		
DATE:	08/08/19			

ASSEMBLIES AFFECTED  
71-1472-02  
43-1147-21

INSTRUCTION SHEET, VALVE, MANIFOLD, 3/4, CC		
SIZE A	1S7121	REV A