

Vekttek, Inc. 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	<b>Instruction Sheet</b>	IS-	1008		
		REV:	B, I.A.W. ECN2964		
		BY/DATE:	JDW	01/11/16	
		APPR/DATE:	GY	02/10/16	
<b>Title Assembly/Disassembly:7500 &amp; 12500 Air Advance Work Supports, Top Retainer</b>					

**Read all instructions before disassembly.**

**Refer to the illustration on page three for component item numbers and a tool list.**

## Disassembly

**Notice: When disassembling multiple work supports, the plunger and body/sleeve assembly from each work support should be kept together.**

### To Remove Spring and Spring Retainer Seal

1. Clamp the work support base (1) in a vise.
2. With an open-end wrench on the plunger (2) and a flat blade screwdriver in the slot on the spring retainer (3) unthread. Remove the spring retainer and spring retainer seal (10) from the plunger.
3. Unthread and remove the spring stud (4).
4. Remove the spring (5).

### To Remove Plunger Wiper

1. Clamp the work support base (1) in a vise.
2. With an open-end wrench on the plunger (2) and a flat blade screwdriver in the slot on the spring retainer (3) unthread and remove the spring retainer from the plunger.
3. Unthread and remove the spring stud (4).
4. Remove the spring (5).
5. Remove the plunger (2).
6. Remove wiper (6) from the body/sleeve assembly (7).

**Caution: Do not scratch the inner sleeve.**

7. Clean all parts thoroughly and set aside to dry.

### To Remove O-rings

1. Clamp the work support base (1) in a vise
2. Unthread the body/sleeve assembly (7) from the base (1) and slide it off the plunger (2).

**Caution: Use a six-point socket only. Other types of wrenches may damage the work support.**

3. Remove the o-rings (8) & (9).
4. Clean all parts thoroughly and set aside to dry.

Vekttek, Inc. 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	<b>Instruction Sheet</b>	IS-	1008		
		REV:	B, I.A.W. ECN2964		
		BY/DATE:	JDW	01/11/16	
		APPR/DATE:	GY	02/10/16	
<b>Title Assembly/Disassembly:7500 &amp; 12500 Air Advance Work Supports, Top Retainer</b>					

# Assembly

## To Assemble Spring and Spring Retainer Seal

1. Insert the spring (5) into the plunger (2).
2. Insert the spring stud (4) through the plunger (2) and tighten it to the base (1) to the torque specification on the parts list.
3. Install the spring retainer seal (10) into the threaded hole in the plunger (2). Install the spring retainer (3) into the threaded hole in the plunger (2) and with an open-end wrench on the plunger and a flat blade screwdriver in the slot on the spring retainer tighten the spring retainer to the torque specification on the parts list.


## To Assemble Wiper

1. Insert the wiper (6) into the body/sleeve assembly (7).
2. Insert the plunger (2) into the body/sleeve assembly (7).
3. Insert the spring (5) into the plunger (2).
4. Insert the spring stud (4) through the plunger (2) and tighten it to the base (1) at the torque specification on the parts list.
5. Install the spring retainer (3) into the threaded hole in the plunger (2) and with an open-end wrench on the plunger and a flat blade screwdriver in the slot on the spring retainer tighten the spring retainer to the torque specification on the parts list.

## To Assemble O-rings

1. Lubricate all o-rings with clean hydraulic fluid. (Vekttek 65-0010-01 or equivalent).
2. Place the o-rings (8) & (9) in their respective places in the base (1).
3. Position the body/sleeve assembly (7) over the plunger (2), press it down to the base (1) and tighten it to the torque specification on the parts list. **Note: Make certain the o-rings have not moved out of position. Caution-Use a six-point socket only. Other types of wrenches may damage the work support.**

<b>Vekttek, Inc.</b> 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	<b>Instruction Sheet</b>	<b>IS-</b> 1008
		<b>REV:</b> B, I.A.W. ECN2964
		<b>BY/DATE:</b> JDW 01/11/16
		<b>APPR/DATE:</b> GY 02/10/16
<b>Title Assembly/Disassembly: 7500 &amp; 12500 Air Advance Work Supports, Top Retainer</b>		

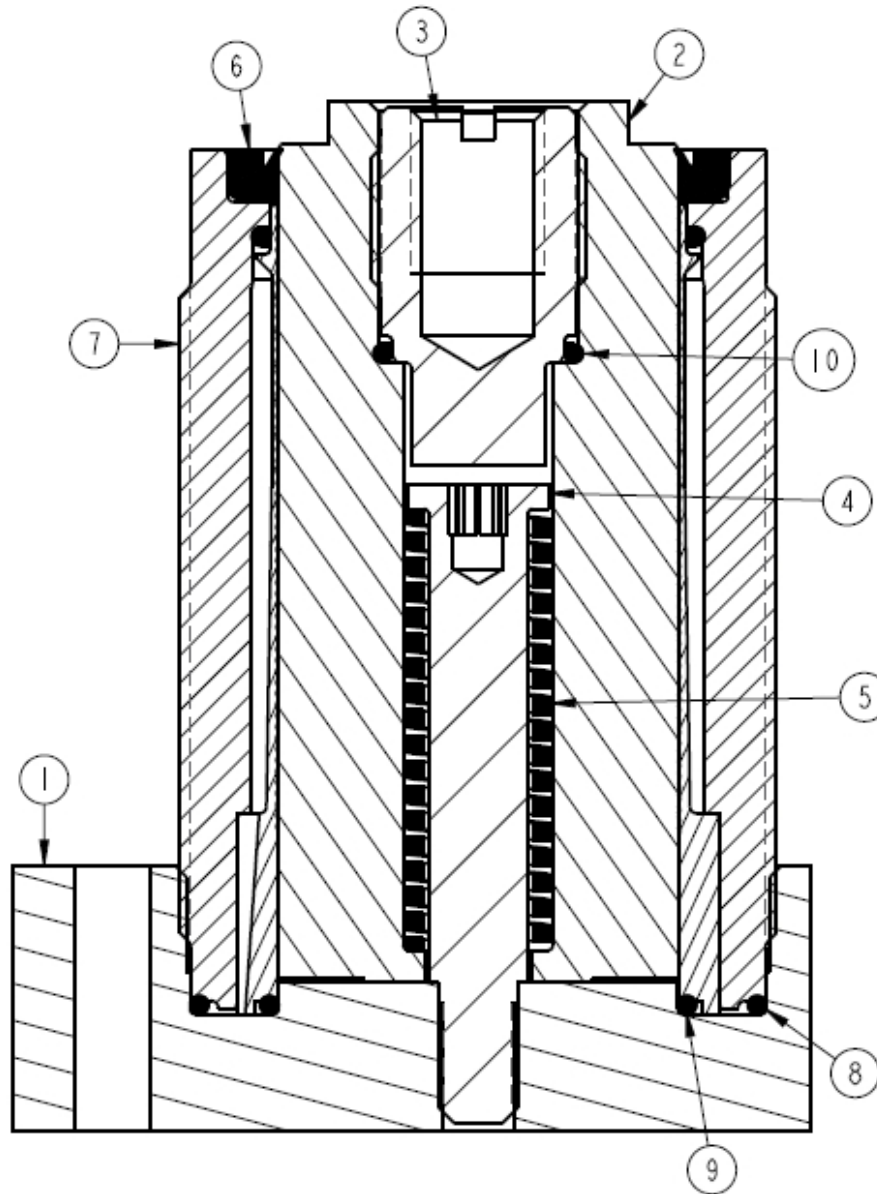

Model Number	Tools needed
10-0615-06	2 socket (six pt), 3/16 hex key, 1 1/8 open-end wrench, 11/16 wide flat blade screwdriver
10-0620-07	2 3/4 socket (six pt), 3/16 hex key, 1 5/8 open-end wrench, 13/16 wide flat blade screwdriver